


Scanning 8mm Film

Step 1: Getting started

- Press power button to turn MovieMaker on/off
- Mount the reels and film - If your film reel has 8 mm (small mounting hole), mount the reel directly to the left shaft, otherwise use the provided red color reel adapter. If adapters are needed always place the Red color adapter on the LEFT side



Left Reel Adapter (Red/No-Fin)

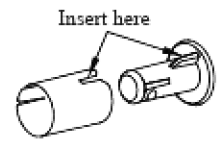


Right Reel Adapter Grey/Finned)

- Mount the included 5" reel on to the right shaft.
- Follow the Film Routing Diagram printed on the face of MovieMaker to route the film.


Step 2: Placing the film

- Slide open the flap door, position film sprocket holes at the top. Place film underneath the 3 white tabs. Otherwise, the recorded videos will be jittery.

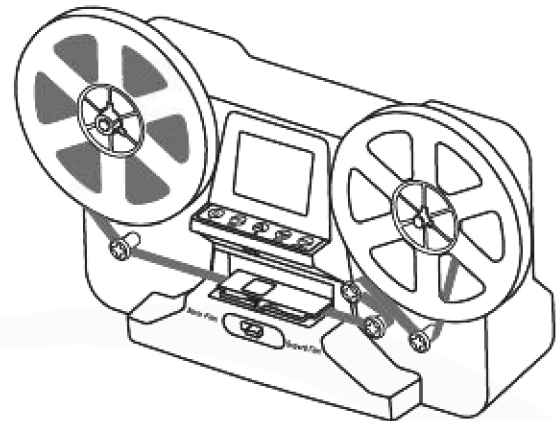


Steps to place film on table:

1. Place and hold film underneath Tab #1
2. Twist film slightly and clip film underneath Tab #2
3. Twist film slightly and clip film underneath Tab #3

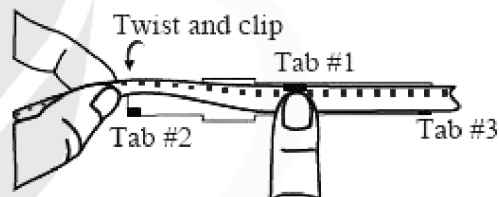

- Make sure the film is properly placed underneath all 3 white tabs, then close the flap door.

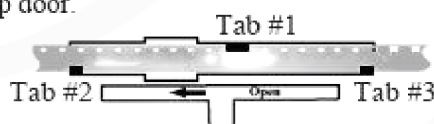

Scanning 8mm Film

Step 3: Record

- Move the Film Selection Lever left (8 mm) or right (Super 8) to select the film type, then press Enter/Start button.
- Press Enter/Start to start recording. While recording is in process, a red dot at upper left corner will blink.
- The MovieMaker will stop recording 2 seconds after user pressed. Enter/Stop button.
- The file counter at lower right corner will increase by one after each recording stop. The number of the counter also represents the file name of recorded film.


Step 4: Playback

- Press Menu button, highlight the Playback selection, then press Enter.
- Press Up/Down arrow button to select the film file to be Playback, then press Enter/Start.
- Press Enter/Stop to pause the playback.
- Press Menu button one time to the enter Edit mode. Highlight Return (go back to Playback) or Delete (delete the current file).
- Press Menu button twice to go back to the Record mode or Main menu.

Scanning 8mm Film

Step 3: Rewind

- Open the flap door and remove film, then close the flap door. Check and confirm the flap door is closed and not in the way of rewinding process to prevent film from being scratched.
- Swap reels. Place an empty reel on the right side shaft and place film perforation holes on the outside (as shown). If any reel adapter is needed, always place grey adapter on the right side reel.
- Follow the film routing diagram printed on the MovieMaker (the dotted line) and follow the instructions on the screen.
- Press Enter button to Start/Stop the rewinding process.

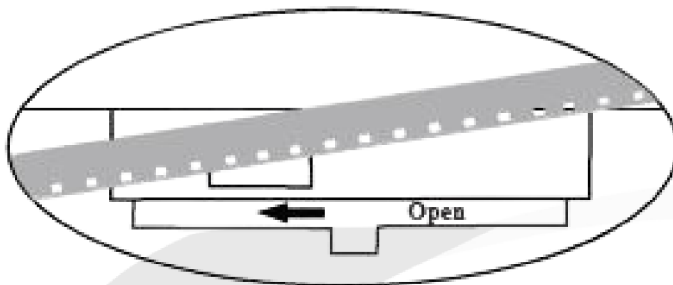

Remove Film From
Light Table Then
Swap Reels
Full(L) Empty(R)

GO